


# Mounting Kit

## INSTRUCTIONS FOR ACTIVE MOUNTING KIT OF SCORPION 8" PLUS, 10" PLUS, 10X AND 12"

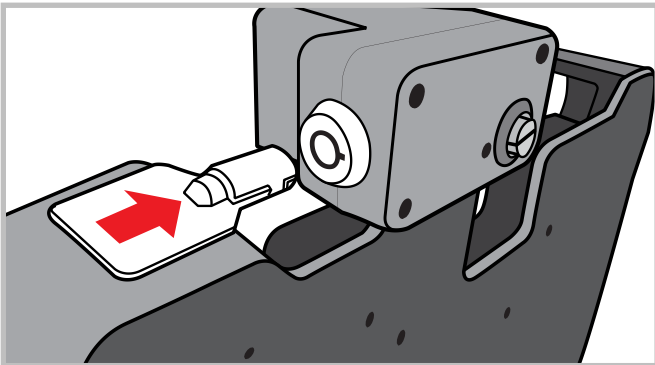


### OPENING THE BRACKET

Insert the key into the lock on the retaining clip so that the key tip fits into the hole (see above).

Then push the key in, turn it 360° (clockwise or counter-clockwise) and pull it out.

When pulled out, a pin jumps out of the keyhole via a spring mechanism (see figure 2).

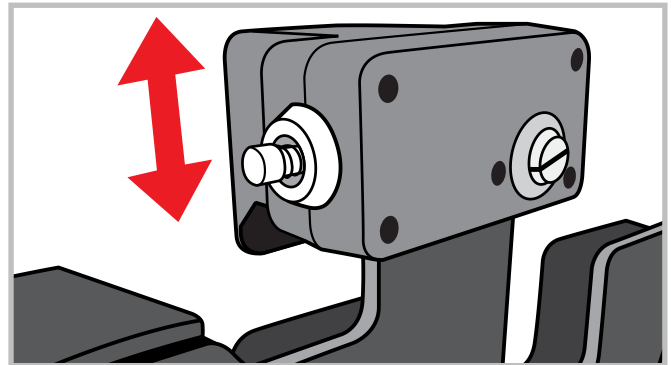

### ADJUSTING AND LOCKING THE BRACKET

When the pin sticks out as shown, you can release the retaining clip and slide it up.

Then place the SCORPION tablet in the holder (the pins must point downwards).

**As long as the key pin is protruding, you can adjust the bracket up and down depending on the size of the tablet.** The scope is usually one to two centimeters.

To lock the bracket in the desired position, simply push the pin back into the keyhole until it clicks into place.